integratech
less energy more light.

RF Dual Color Remote Controller

CE RoHS COMPLIANT

Important: *Read All Instructions Prior to Installation*

Function introduction

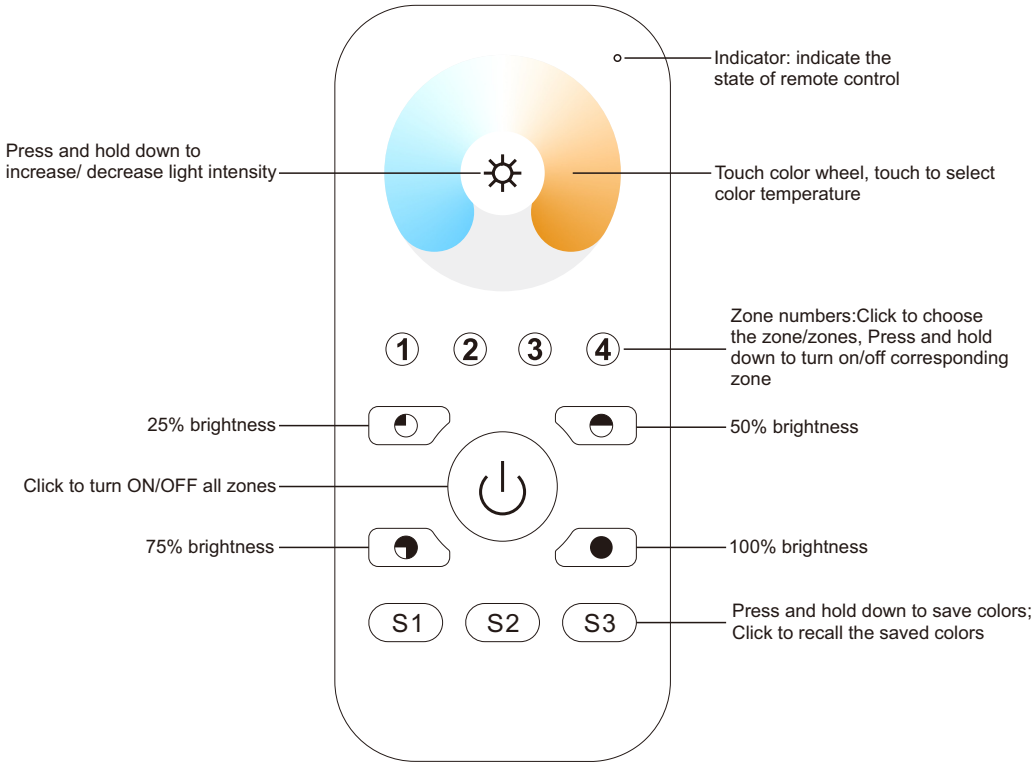

Front side

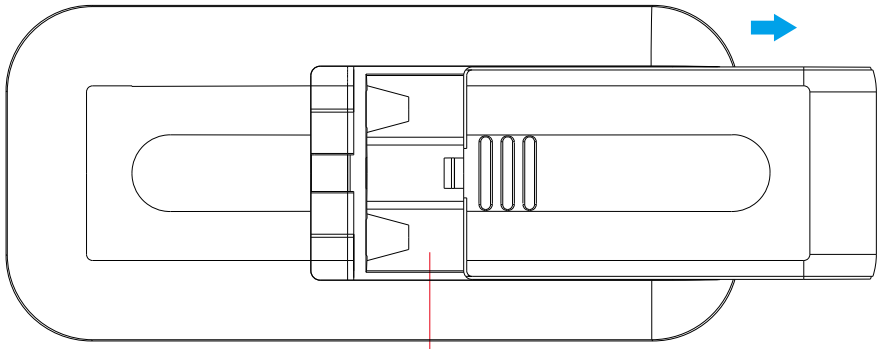

Bottom side

Product Data

Output	RF signal
Operation Frequency	869.5/916.5/434MHz
Power Supply	4.5V(3xAAA battery)
Operating temperature	0-40°C
Relative humidity	8% to 80%
Dimensions	120x55x17mm

- Control 4 zones of RF receivers separately.
- CCT color controller
- High sensitive & high stable, fast & precise color control.
- Compatible with all universal series RF receivers
- 1 receiver can be paired by max 8 different remote controls.
- Waterproof grade: IP20

Safety & Warnings

- This device contains AAA batteries that shall be stored and disposed properly.
- DO NOT expose the device to moisture.

Pair with RF receiver(Method 1)

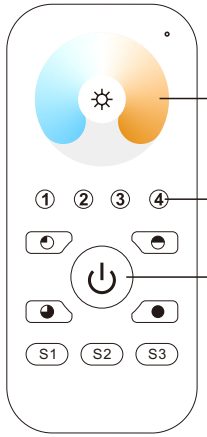

Step 1: Do wiring the RF receiver according to wiring diagram(please refer to the instruction of RF receiver that you would like to pair with.

Step 5: Touch the color wheel, LED lights connected with the RF receiver flicker once means the receiver is paired with zone 4 successfully.

Step 4: Choose and click a zone number(e.g. zone 4)

Step 2: Click **ON/OFF** button to activate the remote

Step 3: Click the "**Learning Key**" button on RF receiver or re-power on the receiver three times continuously to set it into pairing status

Pair with RF receiver(Method 2)

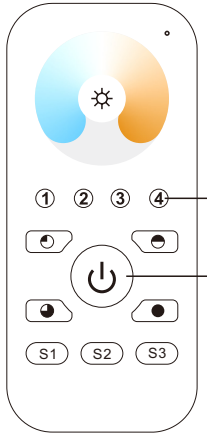

Step 1: Do wiring the RF receiver according to wiring diagram(please refer to the instruction of RF receiver that you would like to pair with.

Step 4: Choose and click a zone number(e.g. zone 4) twice, then press and hold it continuously and quickly within 10 seconds, LED lights connected with the RF receiver flicker once means the receiver is paired with zone 4 successfully.

Step 2: Click **ON/OFF** button to activate the remote

Step 3: Power off and power on the receiver

Save color/scene/mode

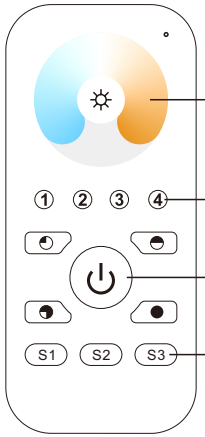

Step 3: Touch the color wheel or click the other buttons to select the scene you like

Step 2: Choose and click one or multiple paired zone numbers(e.g. zone 4)

Step 1: Click **ON/OFF** button to activate the remote

Step 4: Press and hold any scene buttons of **S1-S3**(e.g. **S3**) , LED lights connected with the RF receiver flicker once means the color/scene was saved successfully.

Recall the saved colors/scenes

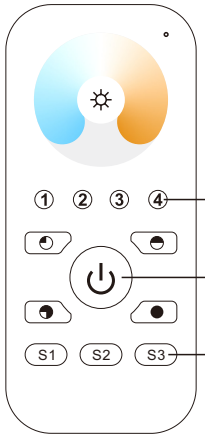

Step 2: Choose and click one or multiple paired zone numbers(e.g. zone 4)

Step 1: Click **ON/OFF** button to activate the remote

Step 3: Click any scene buttons of **S1-S3**(e.g. **S3**) to recall the saved scene

If you use multiple receivers, you have two choices:

Option 1: have all the receivers in the same zone, like zone 1

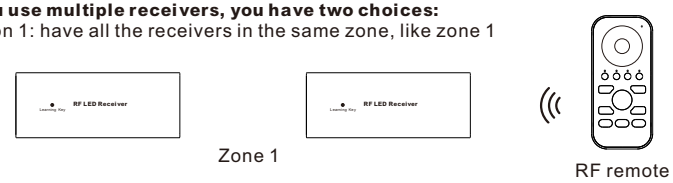

Option 2: have each receiver in a different zone, like zone 1, 2, 3 or 4

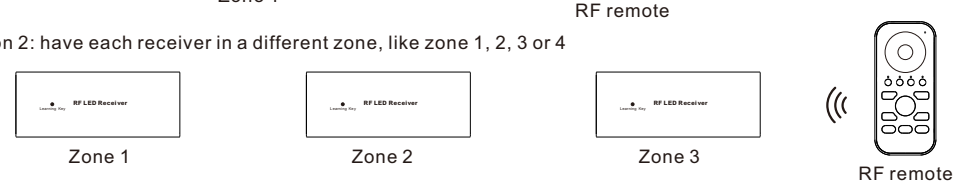

In conformity with the provisions of Council Directives
Radio Equipment Directive 2014/53/EU
Restriction of Hazardous Substances (RoHS) 2011/65/EC and Regulation (EC) No 1907/2006 of the European Parliament and of the Council (REACH)